

Error Codes

LED 1 (Red)	LED 2 (Amber)	Meaning	How to Resolve
Off	Off	No power	Turn the machine on.
Off	On	Normal Operation	
On	Off	Normal Operation	
On	On	The machine is currently being controlled by an externally connected device.	
Blinking	On	There is a problem with the filter.	<p>If the machine is making a solid beeping noise and the lamp will not start, ensure that the filter is properly inserted. Turn the machine off and on again via the power buttons at the base of the machine. Ensure that the machine is unplugged before opening the cover.</p> <p>If the machine is beeping intermittently, replace the filter.</p>
Blinking alternatively		Non-movement error	
Blinking in unison		There is a problem with voltage coming into the machine.	If the machine is beeping solid, it has detected an overvoltage condition, and disabled the lamp to protect it. If the machine is beeping intermittently, then it has detected an undervoltage condition. This may be caused by an insufficiently sized line cord. See (???) in this manual for information on proper line cord sizing.
On	Blinking	The cover is removed.	Replace the cover and turn the machine off and on again via the power buttons on the base of the machine. Do not remove the cover while the machine is plugged in.
Off	Blinking	The machine is tilted, or has detected a strong impact.	Correct the orientation of the machine and it will resume normal operation. For critical tilts, the machine may need to be restarted via the power buttons at the base of the machine.
Blinking	Off	The machine has overheated.	If the machine remains plugged in, the blower will continue to run to cool the machine off. It will resume normal operation once it has reached a safe temperature, however, check the filter and ensure that the vents are not blocked.